5

WATER INTAKE KEY

| 1 | FRONT BALLAST INLET |
|---|---|
| 0 | PORT REAR BALLAST INLET |
| 0 | PORT REAR SUPPLEMENTAL BALLAST OUTLET (OPTIONAL EQUIPMENT) |
| 0 | ENGINE INTAKE |
| | STBD REAR BALLAST INTAKE |
| 0 | STBD REAR SUPPLEMENTAL BALLAST OUTLET (OPTIONAL EQUIPMENT) |
| | |

NOTES:

F

Е


D

С


В

А

- ENGINE WATER EXITS BOAT THROUGH SURF PIPE EXHAUST WHEN RUNNING 1.
- RED HANDLE RAW WATER INTAKE BALL VALVE TO BE CLOSED IF DECONTAMINATING THROUGH FRESH WATER FLUSH & ENGINE RUNNING 2.

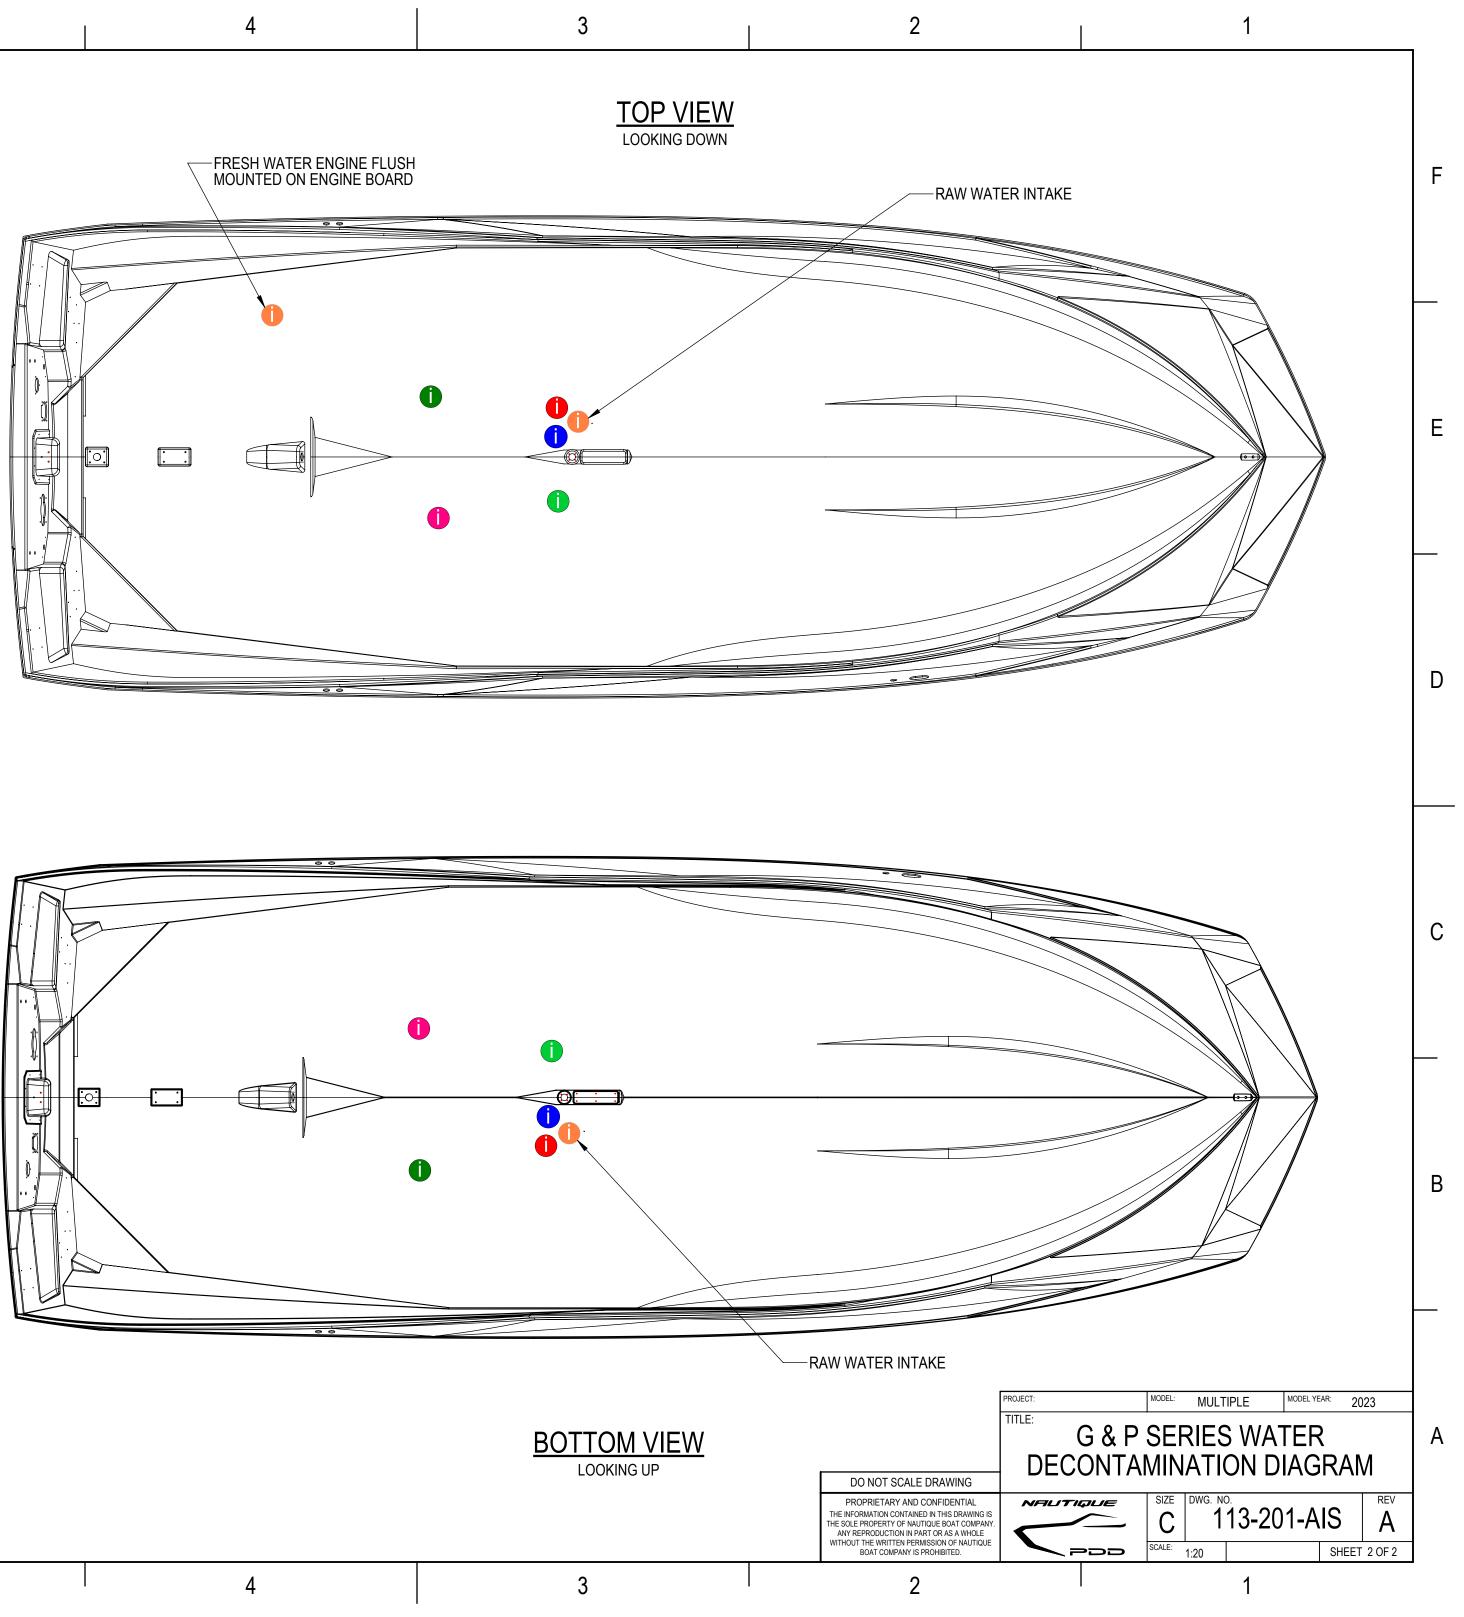

<u>G23 SHOWN</u> G21, G25, P23 & P25 SIMILIAR

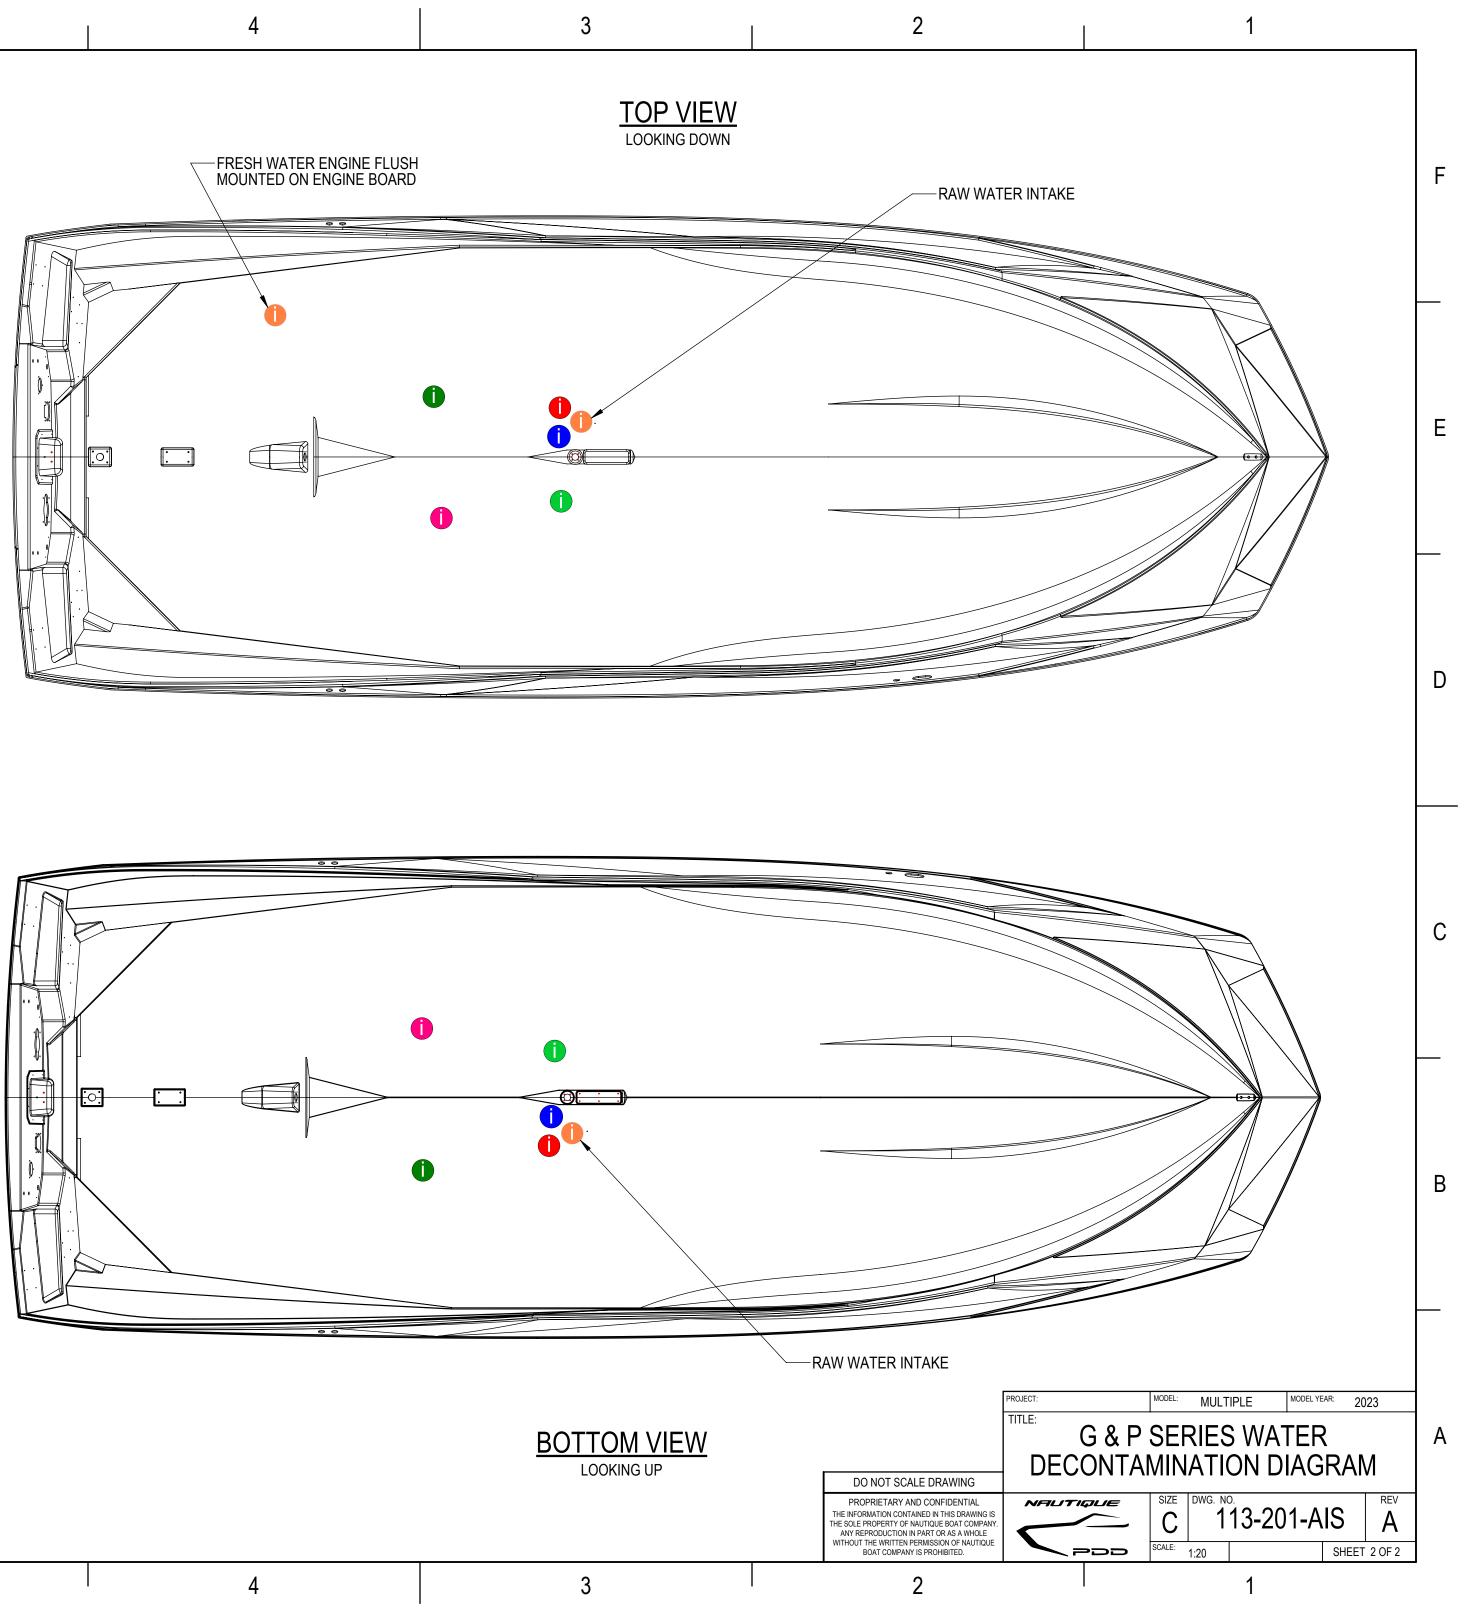

6

5